 
 




Hilti Corrosion handbook / DFTM

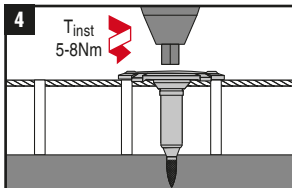

SF 121-A	6-10
SF 150-A	5-8
SF 14	5-8
SFC 14-A	6-10
SF 18-A	5-8
SFC 18-A	5-8
SF 22	5-8

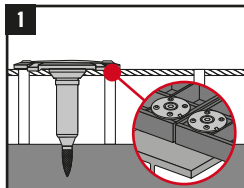